### **Starter**



Convert

- a) 10101 to decimal
- b) FACE to binary
- c) 87 to binary

### **Topic 4.7** – Computer Organisation & Architecture


**Introduction to Computer Architecture** 

### **Abstraction**

- What is abstraction?
  - AQA: Representation that is arrived at by removing unnecessary details
- Throughout the course, we will use simplified models to describe complicated systems and processes
  - This is especially true in Computer Architecture
  - This is a form of abstraction

#### Three-box model

 The three-box model describes, in a simplified form, a von Neumann architecture

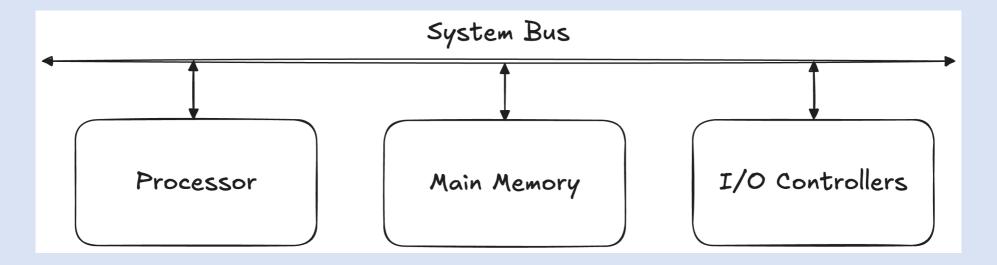

What does I/O mean? Input/output

#### **Processor**

- Also known as the CPU (central processing unit)
- Processes data by executing program instructions
- Each processor has a particular set of operations it can perform, known as its instruction set
- We'll see more about processors in a future lesson

# Main memory

- Memory that can be accessed directly by the processor
- Memory is stored on chips (integrated circuits)
- Each memory location has a unique physical address
- Volatile: data is only maintained while power is maintained
- Two main types:
  - RAM (random access memory)
    - Provides working memory that is read from and written to by the processor
    - Used during the fetch-decode-execute cycle
  - ROM (read-only memory)
    - Used to store information for use during the boot sequence when a computer is first powered on

### I/O Controllers

- All external (peripheral) devices are connected to the processor with I/O controllers
- They satisfy the power requirements of the connected devices
- They allow input data to be received from devices, and output data to be transmitted to devices

#### **Buses**

- A bus is a set of parallel wires used to connect individual components of a computer system
- Signals are sent between components via buses, representing:
  - Data
  - Memory addresses
  - Control information

### **Control bus**

- The control bus is used to transport control signals between components
- It is bidirectional
- Control signals include:
  - Clock
  - Reset
  - Memory read
  - Memory write
  - I/O

### Address bus

- The address bus is used to transport addresses for main memory locations and I/O controllers
- It is unidirectional
  - ▶ The processor writes to it; other components read from it

#### **Data bus**

- The data bus is used to transport data between components
- It is bidirectional

#### Example:

- 1. Processor places a memory address on the address bus
- 2. Processor sends a MEMORY READ signal over the control bus
- 3. Main memory reads the address from the address bus
- 4. Main memory places the requested data on the data bus

# Stored program concept

### Two parts:

- 1. A program must be resident in main memory to be executed
- 2. Machine code instructions are fetched sequentially and executed one at a time by the processor

### Types of stored program concept

- We need to consider two types of stored program concept
- von Neumann architecture
  - Data and instructions are stored in the same main memory
- Harvard architecture
  - One memory for instructions, one memory for data

# Advantages and disadvantages



**Discuss:** What are the advantages and disadvantages of these two architectures?

# Advantages and disadvantages

#### von Neumann

 (-) same buses for instructions and data, so competition for resources

#### Harvard

- (+) reading instructions and reading/writing data can happen in parallel, so can be faster
- (+) Avoids bottleneck of single data/address buses
- (+) Instruction and data memory can have different word lengths
- (+) Avoids possibility of data being executed as code, which can be exploited by hackers

# Where are they used?

- von Neumann architecture is preferred for general-purpose computing devices (e.g. a laptop or PC)
- Harvard architecture is preferred for embedded systems and DSP systems
  - Digital signal processing (DSP) is the realtime processing and mathematical analysis/manipulation of signals (e.g. audio, temperature, pressure etc.)
  - Data and instruction memory can be specifically designed for the application, resulting in more efficient systems

# **Ada Computer Science**



- Join my group
- We'll use this to apply content from the lesson at the end

L103 – Intro to CompArch